



Model	Other model names	Date	Revision	Revision date
FX2000	Tarantula (AoA), Black Widow Synthetic Version (AoA)	2018-06-11	EN.19.01	2019-06-27

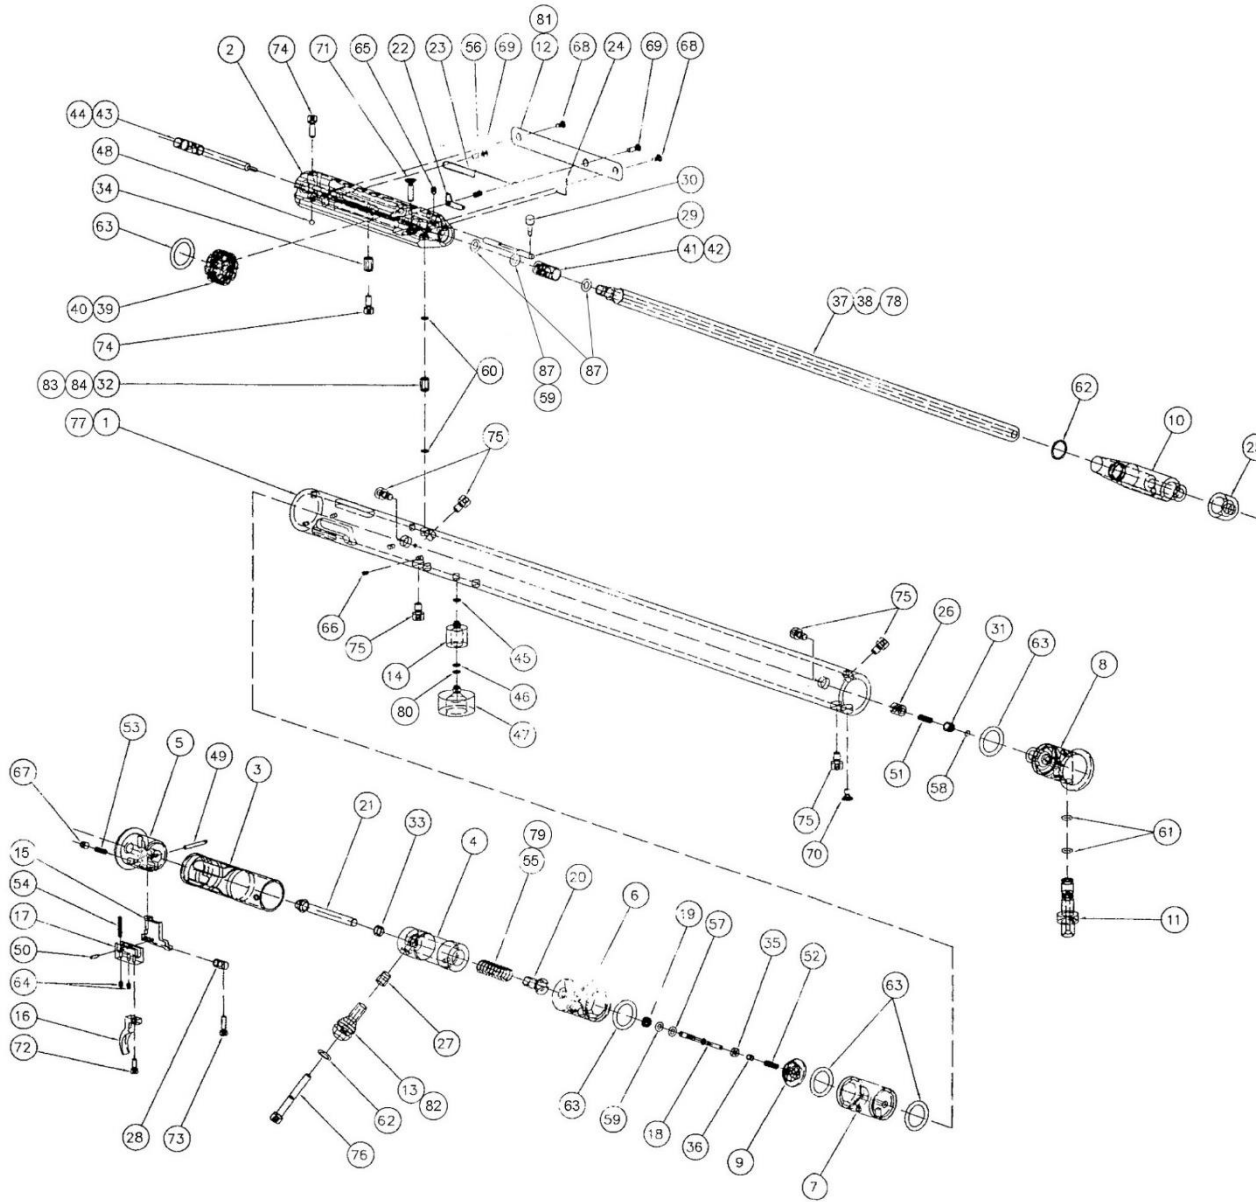

- A. W&S Walnut
- B. RWS Walnut
- C. FX Synthetic

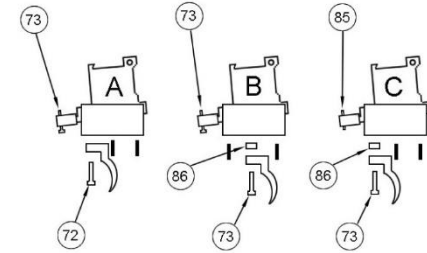

Model	Other model names	Date	Revision	Revision date
FX2000	Tarantula (AoA), Black Widow Syntetic Version (AoA)	2018-06-11	EN.19.01	2019-06-27

NO	ART. NO	DESCRIPTION	NO	ART. NO	DESCRIPTION	NO	ART. NO	DESCRIPTION
1	2002	Air cylinder (standard)	31	5000	Inlet valve	61	5108	O-ring 5.28x1.78 PUR70
2	2004	Barrel housing	32	2036	Air transfer port 4.1	62	5109	O-ring 11.6x2.4 NBR70
3	2010	Hammerhousing cover	33	2038	Hammer spacer	63	5101	O-ring 20x2.5 NBR70
4	2011	Hammer housing	34	2039	Brass spacer 6.6	64	2500	Screw M3x6
5	2009	End plug	35	2040	Plastic valve seal	65	2501	Screw M4x6
6	2012	Main valve housing	36	2041	Valve seal holder	66	2502	Screw M4x12
7	2013	Vibration damper	37	2044	Barrel .22	67	2503	Screw M5x8
8	2008	Front plug	38	2047	Barrel .177	68	2504	Screw M3x6
9	2014	Main valve lid	39	2050	Magazine .22	69	2508	Screw M3x10
10	2015	Barrel holder	40	2053	Magazine .177	70	2505	Screw M4x10
11	5006	Fill probe	41	2056	Brass barrel inlet .22	71	2506	Screw M4x12
12	2070	Sideplate FX2000 .22	42	2057	Brass barrel inlet .177	72	12610	Screw M3x8
13	2016	Cocking bolt (black)	43	2058	Pellet prod .22	73	2532	Screw M3x12
14	2018	Pressure gauge spacer	44	2059	Pellet prod .177	74	5201	Screw M4x16
15	2019	Trigger block	45	2042	Plastic washer Ø4	75	2509	Screw M5x6
16	2020	Trigger blade	46	5003	Plastic washer 4mm	76	2512	Screw M5x45
17	2021	Trigger base	47	2043	Pressure gauge	77	2003	Air cylinder (carbine)
18	2022	Main valve pin	48	2531	Rubber ball 5.54 NBR70	78	2045	Barrel .22 carbine
19	2023	Valve seat	49	2517	Pivot pin 2.5x6x20	79	2507	Hammerspring (soft)
20	2025	Hammer foot	50	2518	Pivot pin 2h6x8	80	5005	Plastic washer 2mm
21	2026	Hammer pin	51	2524	Spring 0.5x3x20	81	2071	Sideplate FX2000 .177
22	2027	Index lever	52	2525	Spring 0.6x4x15	82	2017	Cocking bolt (brass)
23	2028	Index lever connector	53	2519	Spring 0.63x3.2x11	83	2081	Air transfer port 2.0
24	2029	Magazine stop	54	2522	Spring 0.63x4x9.6	84	2037	Air transfer port 1.5
25	2030	Muzzle end cap	55	2523	Hammerspring (hard)	85	11508	Screw M3x8
26	2031	Valvescrew	56	2520	Spring 0.5x4x7	86	2063	Trigger spacer
27	2032	Cocking bolt spacer	57	2528	O-ring 1.5x1.0 NBR70	87	5112	O-ring 5.28x1.78 NBR70
28	2033	Trigger cap	58	5111	O-ring 2.5x1.5 NBR90			
29	2034	Magazine pin	59	2529	O-ring 4.3x1.5 NBR70			
30	2035	Magazine pin handle	60	2530	O-ring 5x1 NBR70			